

Inkursive Pens
Unit 11, The Forum
Eastgate St.
Gloucester
GL1 1PL
United Kingdom
https://inkursive.com
tom@inkursive.com



Scan the code to download these instructions as a pdf and get money off coupons

# **Inkursive Manga Pen**

Dear Customer,

Thank you for purchasing an Inkursive pen, I hope it gives you many years of valuable use.

This pen is not intended for use by children under the age of 14. In case of any issues, please contact me first as I may be able to rectify the problem.

#### **Features:**

- Soft Maru-type nib for Calligraphy, Manga and Art
- High capacity piston filler
- Rubber Seal on cap
- Replaceable Nib

### **Filling**

Use only fountain pen ink. Dip-pen ink may contain particles that can clog the feed.



To fill, hold the barrel and twist the end cap anti-clockwise till the piston goes to the top of the pen. Insert the nib in an ink bottle. Twist the end cap clockwise till the piston reaches its limit and clicks. Remove the pen from the ink.

This pen is not suitable for cartridges or a converter.

### Cleaning



Before first use, insert the nib in water containing a drop of washing-up liquid (dish soap) or fountain pen cleaning solution, and fill and empty the pen a few times to clean any residual oil from the nib. Repeat with clean water to rinse.

Before storing for long periods or changing the ink colour, clean the pen the same way to remove any ink.

#### Use

The nib is perfect for drawing detail and fine lines, it is a 'soft' nib suitable for drawing different widths of lines. Use slightly more pressure for a thicker line.


The nib is delicate and can easily be 'sprung'. If the nib stops writing despite ink in the feed, turn it upside down and press down gently down on the paper with the tip of the nib.

The nib will gradually wear and need replacing over time, depending on use.

## Replacing the nib

The nib can be replaced with a 'maru' type dip-pen nib, such as those available from the Inkursive pens shop. Pulling out the old nib will damage it, so only replace when it is worn down. To replace:

- Grip the exposed end of the nib with a pair of nail clippers and pull out.
- Wearing a pair of gloves, align the new nib and push it in as far as it will go.
- Put the tip of the nib on a firm surface such as a pad of paper and push gently till the nib is fully in, see picture.
- Clean the nib of any residual oil by inserting it in soapy water and filling and emptying a few times. Repeat with clean water to rinse.

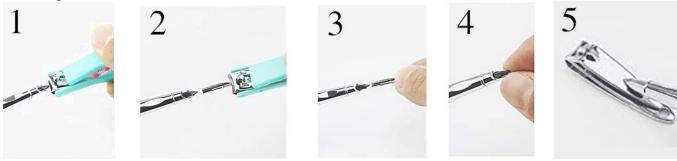

If you have any issues or comments, please contact me on the email above or via the site where you purchased the pen.

Please leave feedback for the pen wherever you bought it, whether your experience was good or bad, as this helps other buyers as well as myself.

Again thank you for your purchase, and I hope you enjoy your new pen.

Tom Kelsey

PS If you have time, I would love to hear your thoughts and/or pictures of your new pen on a review where you bought it

Please see https://inkursive.com for the full catalogue



Star Seller on Etsy

100% positive feedback on eBay

100% 5 star shop reviews on Amazon UK

Statistics correct when last checked on 1<sup>st</sup> July 2023